


APOLLO MASTER CLOCK MANUAL

Lee Manufacturing Company
W192 S6601 Hillendale Dr.
Muskego, Wisconsin 53150
(262) 679-1966

MANUAL BELL CONTROLS

The clock has four push buttons in the upper right hand side of the LCD display.

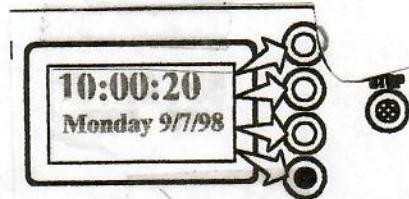

To access the user function press the lowest of the buttons.

On the screen are preset ringing programs on/off for automatic programs or program changes and time changes for worship.

To access one of the three programs before you just press the button that is just to the right of the named program.

There are a number of screens with bell functions, Three per screen. **TO CHANGE SCREENS PUSH THE LOWEST PUSH BUTTON AT THE RIGHT OF SCREEN.**

By pressing this button you change screens and will end up back at display with time, day and date

FUNERAL TOLL

The Apollo funeral toll works as follows. Press the funeral toll button and the display will be flashing **NUMBER OF TIMES** Funeral Toll +1

01 -1
OK

NUMBER OF TIMES BACK

This leaves you the option of entering the age of the deceased or just a number of tolls. example(would like to toll for 3 minutes there a 6 tolls per minute $6 \times 3 = 18$ toll for 3 minutes enter the number 18 in display) To enter the numbers is done as follows to increase the number you press the +1 button to decrease you press the -1. Once you have selected the number you press the **OK** button which is the third button down. Once the **OK** button is pressed the tolling will begin.

3 bell peal function. When using 3 bell peal function enter desired duration in minutes you want bells to ring then press OK

BELL PEAL

To ring bells push lowest button to bell peal screen display will be as follows

- 1 Bell Peal **PRESS**
- 2 Bell Peal **PRESS**
- 3 Bell Peal **PRESS**

To ring the largest bell press the 1 bell peal. To ring the medium bell press 2 bell peal. To ring the small press the 3 bell peal. To ring all three you can press all buttons or press wedding peal.

WORSHIP CHANGES

Enter worship changes and this display will come up on screen

Ringng progr. (1) **UP**
321... **DOWN**
01 minutes
AutoWorship Calls **OK**
08 55 00 **BACK**
SUNDAY NORMAL
01 January..
31 December..

To change time of worship changes press OK. Now the hour will flash. To change the hour you must press the +1 to increase the hour -1 to Decrease the hour. press **OK** key when hour is entered. Now the minutes will be flashing enter the minutes by press +1 to increase -1 to decrease Press **OK** when minutes have been selected. Press **NEXT SCREEN** until time display returns.

ON/OFF OF AUTOMATIC PROGRAMS

To turn on or off the automatic programs press the **NEXT SCREEN** (lowest Button at right of screen) To turn them off press the button to the right of the automatic function you want to turn on or off. When ON the display will say ON when off display will say **OFF**.

To set day of the week for bell rings press either the top key or the second one. Enter day of the wee or daily, weekdays weekends. If you do not want the program to ring .you must enter the word **NEVER** in the day of the week slot.

SETTING TIME

To set the time on the ApolloII Press the next screen to screen that displays Set Time.
Press the button. Display should be as follows. **CHANGE TIME** +1

10 00 -1

OK
CHANGE HOURS BACK

The hours will be flashing, to change the hours press the +1 to increase -1 to decrease.
Now press the **OK** key and the minutes will be flashing. To increase minutes press the +1 to decrease press-1. Press the **OK** key when time is entered. Press the **NEXT SCREEN** button until you return to time display.

SETTING TOWER CLOCK

To set the tower clock with the APOLLOII press **NEXT SCREEN** button to Set Tower Clock
Press the button just to the right . Display should be as follows

TIME SLAVE CLOCK1 +1
10 00 -1

OK
CHANGE HOURS BACK

TOWER CLOCK RUNS OFF TIME THAT IS SET ON APOLLO.
THIS FUNCTION IS USED TO CALIBRATE THE TOWER CLOCK WITH
APOLLOII MASTER CLOCK.

**IN THIS FUNCTION YOU MUST ENTER THE TIME THAT IS ON THE TOWER
CLOCK FACE(S) AND THE APOLLO MASTER CLOCK WILL ADJUST THE
TOWER CLOCK.**

Enter the time that is on the tower clock face(s) by pressing the +1 to increase the hour -1 to decrease the hour. once hour has been set press the **OK** and now the minutes will be flashing enter minutes that is on the tower clock face(s) by pressing +1 to increase -1 to decrease the minutes. When minutes have been entered press the **OK** key and press next screen until time display returns. **NOTE THE MASTER CLOCK WILL DECIDE WHETHER TO WAIT OR ADVANCE HANDS TO RESET.**